
# Blow Gun VMG Series

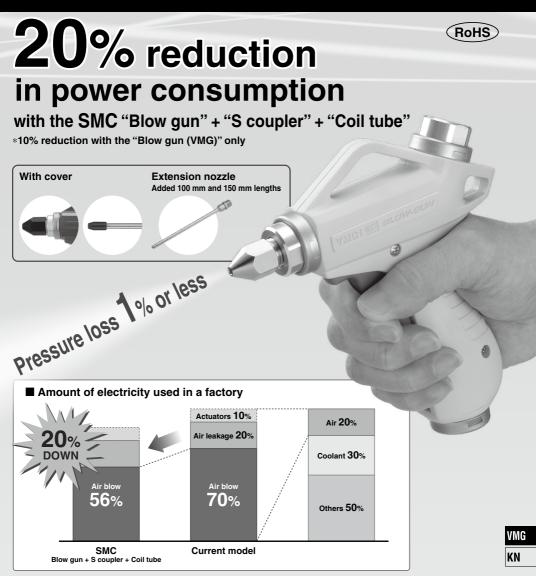



The electricity used by compressors for air accounts for **approximately 20%** of that consumed by the entire factory. Also, **70%** of the air consumed in the process is used for air blowing. SMC blow guns have minimal pressure loss compared with current models, so they can achieve equivalent performance at lower pressures and with less volume of air consumption. As a result, it is possible to achieve a **20%** reduction in power consumption.

## **Energy Saving Pneumatic System Proposal**

## **Energy Saving Effects**

When the yearly total working hours spent on air blowing amounts to 8,300 hours, use of current models results in power consumption costs totaling 194,220 yen. When using the SMC system (Blow gun + S coupler + Coil tube), however, the yearly cost is reduced to 155,625 yen, for a total yearly saving of **38,595 yen**, or **20% of the total**.

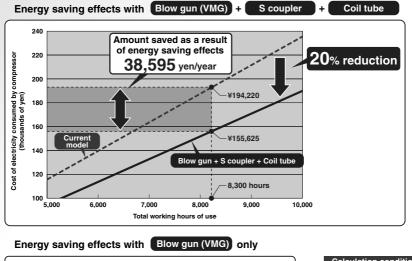


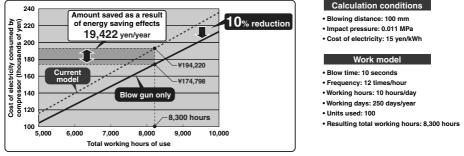

Straighter flowing fluid

"improves pressure loss!"


## Valve Construction and Pressure Loss

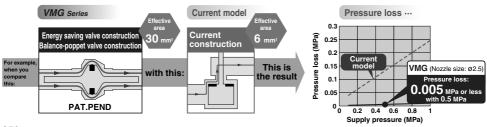


**SMC** 

## **Example of Improvement**

Review the air-blow job and change to the SMC blow gun, S coupler and coil tube to create a larger effective area.

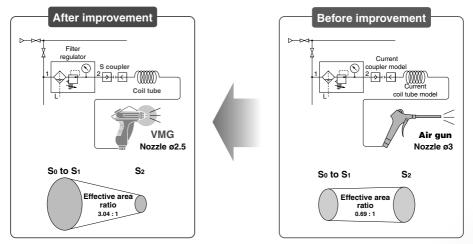

		After improvement	Before improvement	
	Coupler	S coupler	Current model	
Equipment	Piping	TCU1065-1-20-X6	Current coil tube model (I.D. Ø5, equivalent length 5 m)	
	Air gun	VMG (Nozzle size ø2.5)	Current model (Nozzle size ø3)	
	Coupler, Piping (S <sub>0</sub> )	13.45 mm <sup>2</sup>	5.1 mm <sup>2</sup>	
Effective area	Air gun (S1)	30 mm <sup>2</sup>	6 mm <sup>2</sup>	
alea	Nozzle (S <sub>2</sub> )	4.4 mm <sup>2</sup>	6.3 mm <sup>2</sup>	
Effective area ratio (S <sub>0</sub> to S <sub>1</sub> : S <sub>2</sub> )		3.04 : 1	0.69 : 1	
Impact press	ure	0.011 MPa (at a distance of 100 mm)	0.011 MPa (at a distance of 100 mm)	
Regulator pre	essure	0.4 MPa	0.5 MPa	
Pressure insi	de nozzle	0.385 MPa	0.276 MPa	
Compressor	pressure	0.5 MPa	0.6 MPa	
Air consumption		257 dm³/min (ANR)	287 dm³/min (ANR)	
Power consumption by compressor		1.25 kW	1.56 kW	

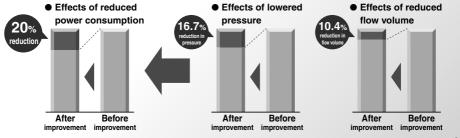


SMC

VMG KN

## Blow Gun, Coil Tube and S Coupler Selection

Recommended system in accordance with the distance

Energy saving effects are enhanced through the appropriate blow gun model selection in accordance with the distance from the target object.

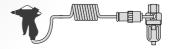


Distance	Recommended system					
Distance	Blow gun	Nozzle size	Fitting	Coil tube*	S coupler	
Up to 20 mm	VMG1□□-02-01	ø1	KQ2H06-02AS	TCU0604□-1-20-X6	KK4P-06H	
Up to 40 mm	VMG1□□-02-02	ø1.5	KQ2H06-02AS	TCU0604□-1-20-X6	KK4P-06H	
Up to 60 mm	VMG1□□-02-03	ø <b>2</b>	KQ2H08-02AS	TCU0805□-1-20-X6	KK4P-08H	
Over 60 mm	VMG1□□-02-04	ø <b>2.5</b>	KQ2H10-02AS	TCU1065□-1-20-X6	KK4P-10H	


\* : B (Black), W (White), R (Red), BU (Blue), Y (Yellow), G (Green), C (Clear), YR (Orange)

## **Energy Saving Flow**


Air guns with an effective area around 6 mm<sup>2</sup> are most commonly used. But the SMC blow gun achieves a 30 mm<sup>2</sup> effective area.

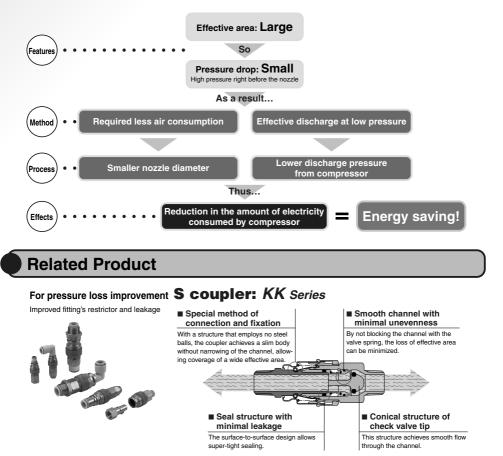

₿SMC

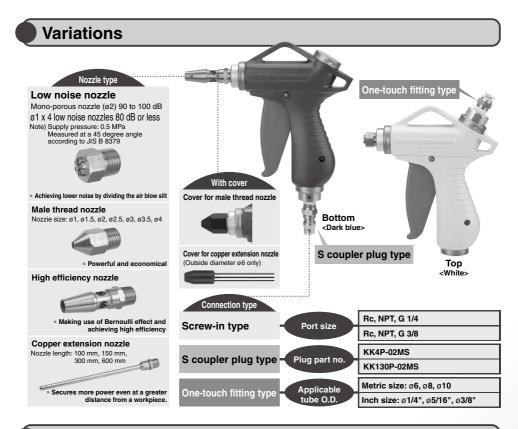

## **Operability, Safety, Environment**

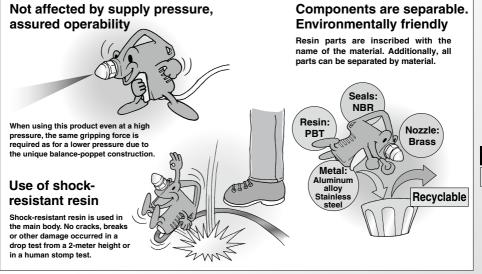

@SMC

VMG Kn

## Blow Gun VMG Series



-

How to Order

VMG11W-02-32-C

	Piping entry	,
1	Bottom	]
2	Тор	]
	Body	

W BU

Body color	
White	
Dark blue	

Connection size
-----------------

Symbol	Piping connection method	Size and model no.		
02	- Threaded		Rc1/4	
03			Rc3/8	
N02		Thread size	NPT1/4	
N03		i nread size	NPT3/8	
F02			G1/4	
F03			G3/8	
11	S coupler	Model no. of	KK4P-02MS	
12	plug	coupler used	KK130P-02MS	
H06	Matria aina	Model no. of	KQ2H06-02AS	
H08	Metric size One-touch fitting		KQ2H08-02AS	
H10	One-touch litting	fitting used	KQ2H10-02AS	
H07	Inch size	Model no. of fitting used	KQ2H07-35AS	
H09	One-touch fitting		KQ2H09-35AS	
H11	One-touch hitting	iittiing useu	KQ2H11-35AS	

Note 1) S coupler and fitting are included in the same package.

Note 2) Port size is Rc1/4 if using the S coupler plug. Note 3) The blow gun port size is Rc1/4 if using the metric size One-touch fitting.

Note 4) The blow gun port size is NPT1/4 if using the inch size One-touch fitting.

#### Specifications

Fluid	Air		
Operating pressure range	0 to 1.0 MPa		
Proof pressure	1.5 MPa		
Ambient and fluid temperature	–5 to 60°C (No freezing)		
Flow rate characteristics (With nozzle removed)	C (dm³/s·bar): 6.0, b: 0.25 (Effective area: 30 mm²)		
Port size	Rc, NPT, G 1/4, 3/8		
Piping entry	Bottom Top		
Nozzle port size	Rc1/4		
Weight (Main unit only)	165 g		
Operational force (when the valve is fully open)	7 N		

With nozzle cover (Only for male thread nozzle, ø6 extension nozzle)

Nil	None
С	With nozzle cover/HNBR

CF With nozzle cover/Fluororubber

#### Nozzle

Symbol	Туре	Nozzle size	Nozzle part no.		
Nil	Without nozzle				
01		ø1	KN-R02-100		
02		ø1.5	KN-R02-150		
03		ø2	KN-R02-200		
04	Male thread nozzle	ø2.5	KN-R02-250		
05		ø3	VMG1-R02-300		
06		ø3.5	VMG1-R02-350		
07		ø4	VMG1-R02-400		
11		ø1	KNH-R02-100		
12	High efficiency nozzle	ø1.5	KNH-R02-150		
13		ø2	KNH-R02-200		
21		ø0.75 x 4	KNS-R02-075-4		
22	Low noise nozzle	ø0.9 x 8	KNS-R02-090-8		
23	with male thread	ø1 x 4	KNS-R02-100-4		
24		ø1.1 x 8	KNS-R02-110-8		


#### Extension nozzle

Symbol	Туре	Nozzle length	Nozzle size	Nozzle part no.
31		300 mm	ø1.5	VMG1-06-150-300
32		300 11111	ø2	VMG1-06-200-300
33	ø6 copper	600 mm	ø1.5	VMG1-06-150-600
34	extension		ø2	VMG1-06-200-600
35	nozzle Note)	100 mm	ø1.5	VMG1-06-150-100
36		100 11111	ø2	VMG1-06-200-100
37		150 mm	ø1.5	VMG1-06-150-150
38		150 11111	ø2	VMG1-06-200-150
41	ø8 copper extension	100 mm	ø2.5	VMG1-08-250-100
42			ø3	VMG1-08-300-100
43			ø3.5	VMG1-08-350-100
44			ø2.5	VMG1-08-250-150
45		150 mm	ø3	VMG1-08-300-150
46			ø3.5	VMG1-08-350-150
47	nozzle Note)		ø2.5	VMG1-08-250-300
48		300 mm	ø3	VMG1-08-300-300
49			ø3.5	VMG1-08-350-300
50			ø2.5	VMG1-08-250-600
51		600 mm	ø3	VMG1-08-300-600
52			ø3.5	VMG1-08-350-600

Note) Part number for set of extension nozzle and fitting. Extension nozzle and fitting are included in the same package.

Refer to "How to attach extension nozzle" in the operation manual for assembly procedures.

#### Construction

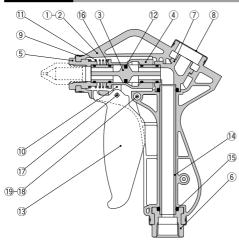


Component Parts					
Description	Material	Note			
Body L	PBT				
Body R	PBT				
Main valve	PBT				
Valve guide	POM				
Nozzle holder	Aluminium alloy	Anodized			
Port	Aluminium alloy	Anodized			
Elbow	PBT	Only for the VMG12			
Cover	Stainless steel				
Ring	Stainless steel				
Arm	PBT				
Spring	Stainless steel				
Main valve seal	HNBR				
Lever	PBT				
Piping (bottom)	POM	Only for the VMG11 Combined with the elbow ⑦.			
O-ring	NBR				
O-ring	NBR				
Parallel pin	Stainless steel				
Cross recessed round head screw	Stainless steel				
Hexagon nut	Stainless steel				
	Description Body L Body R Main valve Valve guide Nozzle holder Port Elbow Cover Ring Arm Spring Main valve seal Lever Piping (bottom) O-ring O-ring Parallel pin Cross recessed round head screw	Description         Material           Body L         PBT           Body R         PBT           Main valve         PBT           Valve guide         POM           Nozzle holder         Aluminium alloy           Port         Aluminium alloy           Elbow         PBT           Cover         Stainless steel           Ring         Stainless steel           Arm         PBT           Spring         Stainless steel           Main valve seal         HNBR           Lever         PBT           Piping (bottom)         POM           O-ring         NBR           Parallel pin         Stainless steel			

Note) Grease is used on rubber and sliding sections.


#### **Flow Rate Characteristics**

#### Male thread nozzle 1500 VMG1-R02-400:ø4 1400 VMG1-R02-350:ø3.5 1300 1200 VMG1-R02-300:ø3 Flow rate [L/min (ANR)] 1100 KN-R02-250:02.5 1000 KN-R02-200:02 900 KN-R02-150:ø1.5 800 KN-R02-100:ø1 700 600 500 400 300 200 100 0 0 1 02 0.3 04 05 0.6 0.7 0.8 09 Supply pressure [MPa]

#### Low noise nozzle with male thread

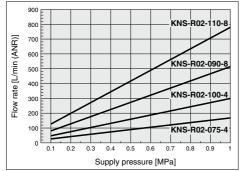


#### High efficiency nozzle

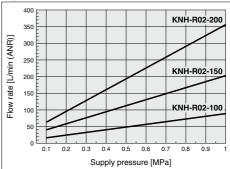

#### Copper extension nozzle

**SMC** 

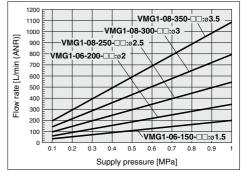


Note) Values when the main valve is fully open

VMG Kn

## VMG Series

#### Dimensions

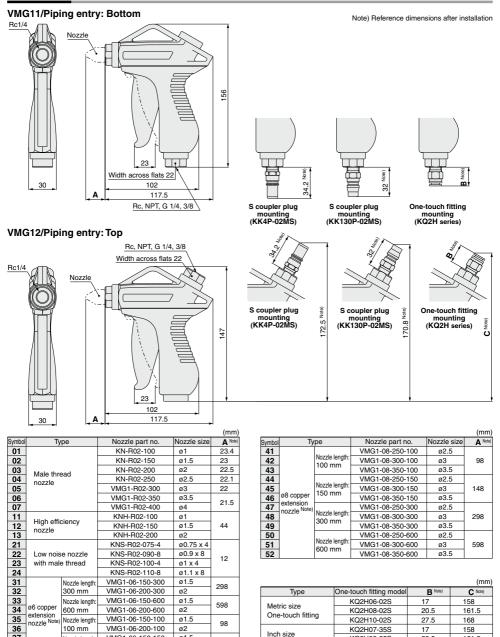

Nozzle length: 150 mm Note) Reference dimensions after installation

VMG1-06-150-150

VMG1-06-200-150

ø1.5

ø2

37

**SMC** 

One-touch fitting

Note) Reference dimensions after installation

148

KQ2H09-35S

KQ2H11-35S

20.5

27.5

161.5

168

#### Dimensions: Nozzles/KN Series

#### Male thread nozzle: KN



Part no.	Nozzle size D	Connection thread	Width across flats H1	L1	<b>A</b> *	Connectio						
KN-R02-100	ø1			31.4	25.4							
KN-R02-150	ø1.5	]		31	25	. //						
KN-R02-200	ø2	R1/4	R1/4	R1/4	R1/4	R1/4		30.5	24.5			
KN-R02-250	ø2.5						R1/4	14	30.1	24.1		
VMG1-R02-300	ø3	]		30	24	H1						
VMG1-R02-350	ø3.5				1					29.5	23.5	·
VMG1-R02-400	ø4			29.5	23.5							

\* Reference dimensions after R thread installation

#### High efficiency nozzle: KNH



Part no.	Nozzle size D	Connection thread	Width across flats H1	L1	<b>A</b> *
KNH-R02-100	ø1				
KNH-R02-150	ø1.5	R1/4	14	52	46
KNH-R02-200	ø2				
* Peteronee dimensions after P thread installation					

Reference dimensions after R thread installation

#### Low noise nozzle with male thread: KNS



Part no.	Nozzle size D	Connection thread	Width across flats H1	L1	<b>A</b> *
KNS-R02-075-4	ø0.75 x 4				
KNS-R02-090-8	ø0.9 x 8	B1/4	14	20	14
KNS-R02-100-4	ø1x4	n1/4			
KNS-R02-110-8	ø1.1 x 8				


\* Reference dimensions after R thread installation

#### Copper extension nozzle set

110	2216 361						
	Part no.	Nozzle size D	Outside diameter	L1	L2 Note1)	L Note1)	Width across flats H1
	VMG1-06-150-100	ø1.5		100	100	106	
	VMG1-06-200-100	ø2		100	100	106	
	VMG1-06-150-150	ø1.5		150	150	156	]
	VMG1-06-200-150	ø2	ø6	150	150	100	12
	VMG1-06-150-300	ø1.5	00	300	300	306	12
	VMG1-06-200-300	ø2		300	300	300	
	VMG1-06-150-600	ø1.5		600	600	606	
	VMG1-06-200-600	ø2		000	000	000	
	VMG1-08-250-100	ø2.5					
	VMG1-08-300-100	ø3		100	100	106	
	VMG1-08-350-100	ø3.5					
	VMG1-08-250-150	ø2.5	150 1		150 156		
	VMG1-08-300-150	ø3		150			
	VMG1-08-350-150	ø3.5	ø8				14
	VMG1-08-250-300	ø2.5	00				14
	VMG1-08-300-300	ø3		300	300	306	
	VMG1-08-350-300	ø3.5					
	VMG1-08-250-600	ø2.5					
	VMG1-08-300-600	ø3		600	600	606	
	VMG1-08-350-600	ø3.5					
	Note 1) Deference dir						

Note 1) Reference dimensions after installation

Note 2) Copper extension nozzle and self-align fitting are included in the same package, (but unassembled). Refer to "How to attach extension nozzle" in the operation manual for assembly procedures.

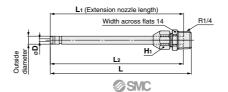



(mm)





(mm)

VMG Kn

## VMG Series

#### **Dimensios: Nozzle Cover**

#### Cover for male thread nozzle



No	Nozzle cover part no.	Material	Applicable blow gun model			
	Nozzie cover part no.		Model	Nozzle type		
	P5670129-01	HNBR	VMG1□□-□-01 to 04	Male thread nozzle		
	P5670129-01F	Fluororubber		ø1 to ø2.5		
	P5670129-02	HNBR	VMG100-05 to 07	Male thread nozzle		
	P5670129-02F	Fluororubber	VMG1LL-L-05 to 07	ø3 to ø4		

#### 

(mm)



#### Cover for copper extension nozzle




Nozzla sover part pa	Material	Applicable blow gun model		
Nozzle cover part no.		Model	Nozzle type	
P5670129-11	HNBR	VMG100-0-31 to 38	ø6 copper	
P5670129-11F	Fluororubber	VMG1LL-L-31 t0 38	extension nozzle	



(mm)

VMG1□-□□-31 to 38

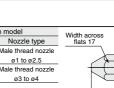

**Specific Product Precautions 1** 

Be sure to read this before handling the products.

Selection

VMG Series

## ₼Warning

#### 1. Check the specifications.

The products in this catalog are designed to be used in compressed air systems only. If the products are used in an environment where pressure or temperature is out of the specified range, damage and/or malfunction may result. Do not use under such conditions.


## **≜**Caution

1. Do not apply the blow gun to flammable, explosive or toxic substances such as gas, fuel gas or refrigerant. Such substances may exude from inside the blow gun.

#### Mounting

## ▲Warning

- Install a stop valve on the supply pressure side of the blow gun to enable emergency shut off in case of unexpected leakage or damage.
- 2. When installing a nozzle on the blow gun, wrap pipe tape around the threads of the nozzle.
- 3. When installing the nozzle, secure the nozzle holder of the blow gun by applying a wrench of 22 mm width across flats to the two chamfered surfaces of the holder without applying force to the body. Then, tighten the nozzle with force within the torque range below. As a guideline, it is equivalent to 2 to 3 additional turns with a tool after manual tightening.

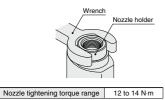

Insufficient tightening may cause loosening of the nozzle.

#### Piping

## 

#### 1. Check the model, type and size before installation.

Also, confirm that there is no scratches, gouges or cracks on the product.

2. Before piping

Before piping, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.

Piping

## **≜**Caution

#### 3. Winding of sealant tape

When screwing together pipes and fittings, etc., be certain that chips from the pipe threads and sealing material do not get inside the blow gun. Also, when the sealant tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.



4. When tightening the threads, secure the nozzle holder of the blow gun by applying a wrench of 22 mm width across flats to the two chamfered surfaces of the holder without applying force to the body. Then, tighten the nozzle with torque specified in the table below. As a guideline, it is equivalent to 2 to 3 additional turns with a tool after manual tightening.

Be careful that tightening with torque beyond the ranges in the table below may cause damage to the body.



M	ale thread	Tightening torque N·m		
	R1/4	12 to 14		
	R3/8	22 to 24		

- Allow extra length when connecting a tube to accommodate changes in tube length due to pressure.
- Confirm that no twisting, turning or tensile force or moment load is applied to the port or tube. This may cause fittings to fracture or tubes to be crushed, burst or come loose.
- 7. Do not abrade, entangle or scratch the tube. This may cause the tube to be crushed, burst or come loose.

#### Lubrication

### **A**Warning

1. Do not lubricate the product.

It may contaminate or damage the target object.

VMG KN

Air Supply

## **≜**Marning

#### 1. Use clean air.

Do not use compressed air which includes chemicals, synthetic oils containing organic solvents, salt or corrosive gases, etc., as it can cause damage or malfunction. **Specific Product Precautions 2** 

Be sure to read this before handling the products.

#### Air Supply

VMG Series

## **A**Caution

#### 1. Install air filters.

Install air filters at the upstream side of blow gun. Choose the filtration degree of 5  $\mu m$  or finer.

2. Install an after-cooler, air dryer or water droplet separator, etc.

Air excessive drainage may cause a malfunction of blow gun and contaminate or damage the target object. To prevent this, install an after-cooler, air dryer or water droplet separator, etc.

**Operating Environment** 

### **A**Warning

- 1. Do not use in an atmosphere of corrosive gases, chemicals, sea water, water or water vapor or in an environment where such substances may adhere.
- 2. Provide shading in an environment where the product is exposed to the sunlight.
- 3. Do not use in an environment where a heat source is at a close distance.
- 4. Do not use in an environment where static electricity is a problem. It may cause malfunction or failure of the system. Please contact SMC for use in such an environment.
- Do not use in an environment where spatters are generated. There is danger of fires caused by spattering. Please contact SMC for use in such an environment.
- 6. Do not use in an environment where the product is exposed to cutting oil, lubricating oil or coolant oil. Please contact SMC for use in an environment where the product is exposed to such liquid as cutting oil, lubricating oil or coolant oil.

#### Maintenance

## Caution

- 1. In periodical inspections, check the following items and replace the parts if necessary.
  - a) Scratches, gouges, abrasion, corrosion
  - b) Air leakage
  - c) Twisting, crushing and turning of connected tubes
  - d) Hardening, deterioration and softening of connected tubes
  - e) Loosening of nozzles
- 2. When removing the product, first stop the pressure supply, exhaust compressed air in the piping and check the condition of atmospheric release.
- 3. Do not disassemble or remodel the body of the product.

∕∂SMC

Handling

## **Warning**

- 1. To prevent lurching of the nozzle due to air pressure, confirm that the nozzle is not loosened or rattling by pulling it by hand before operation.
- 2. Make sure to wear safety goggles to protect yourself from splashed substances.
- Do not direct the tip of the nozzle at the face or other parts of a human body. It may cause danger to personnel.
- 4. Do not use the product to clean or remove toxic substances or chemicals.
- 5. Do not drop, step on or hit the product. It may cause damage to the product.
- Do not use the product to disturb public order or public hygiene.
- 7. This product is not a toy.
- 8. After blowing, make sure to hang the product on a hook, etc.

If leaving the product in a dusty place, particles will enter the product and may result in a malfunction.



- 9. When the blow gun is used or stored, confirm that no twisting, turning or tensile force or moment load is applied to the port or tube. This may cause fittings to fracture or tubes to be crushed, burst or come loose.
- 10. When attaching a nozzle cover, align the hex parts of the nozzle and nozzle cover before covering. When attaching an extension nozzle cover, confirm that the nozzle tip is completely inserted into the extension nozzle cover.
- 11. Do not use a nozzle cover or extension nozzle cover if it is cracked or does not fit securely, and replace with a new cover.